

SUPER COMBO 4000

DIRECTIONS FOR USE



1 INSTALLATION

- Remove 2 Shipping Rods (located on back panel).
- Connect Hot & Cold Water hoses.
Note: Cold water hookup is needed for condensing drying.
- Plug power cord into a 110V/60Hz outlet.
- Place drain hose (using U-Connector provided) into a sink or standpipe - 28"-40" high.
- Attach 4" vent hose (not included) on the exhaust outlet if Venting option will be used.
- Venting/Condensing drying option - Press button for 5 seconds to select option.

2 LAUNDRY PREP

- Load the machine to a maximum of 2/3 full.
- Use High Efficiency (HE) detergent - approximately 1 tablespoon.
- Use liquid fabric softener - items tumble more freely and dry faster.

3 OPERATION

- WASH & DRY: Turn knob to Wash setting (right side) - Set Dry time (Time +/-) Press START.
- WASH ONLY: Turn knob to Wash setting (right side) - Press START.
- DRY ONLY: Turn knob to select Full/Half Heat (left side) - Set Dry time (Time +/-) Press START.
Note: Heat will not come on during wool cycle.
- Water Level button - Press to decrease water for small loads.

4 WASHING TIPS

- DETERGENT: Use HE Detergent, Equator® is recommended.
- FABRIC SOFTENER: Downey® is recommended to reduce wrinkles.
- DELAY START: Press to delay start time up to 24 hours.



5 DRYING TIPS

- Drying time is 30% faster if liquid fabric softener is used.
- In condensing dryer mode, fabrics will be damp to the touch when unloaded but will air dry quickly.
- Over-Drying will cause wrinkles and can damage fabric.
- Wrinkle Guard - Drum will tumble every 5 mins after end of Dryer cycle to reduce wrinkles.

DIAGNOSTIC MENU		
Code	Description	Component
E1	Door close	Door Switch
E2	Drain	Drain Pump
E3	Water inlet	Inlet Valves
E4	Water overfill	Pressure Switch
E5	Motor	Thermal Protector +Electronic Module
E6	Communication between display & electronic module	Communication Cable

Cycle	Wash Times		Approximate Dry Times	
	H	M	H	M
Heavy	1	10	2	00
Towels	1	00	2	00
NORMAL	0	55	1	30
Quick Wash	0	40	1	00
Kids	0	40	1	30
Delicate	0	40	1	00
Wool	0	40	TUMBLE ONLY NO HEAT	

For Questions or Service:

www.ApplianceDesk.com

1-800-776-3538